



2010-2013 Mazdaspeed 3 Radiator Cover Installation Instructions

Tooling:

- ✓ Small flat head screw driver
- ✓ 10mm wrench


Included:

- ✓ One (1) Radiator Cover


1. Start by turning the hood levelers all the way in on both sides.



2. Using an 8mm wrench, loosen the two bolts shown below, raise the hood latch assembly all the way up and re-tighten.

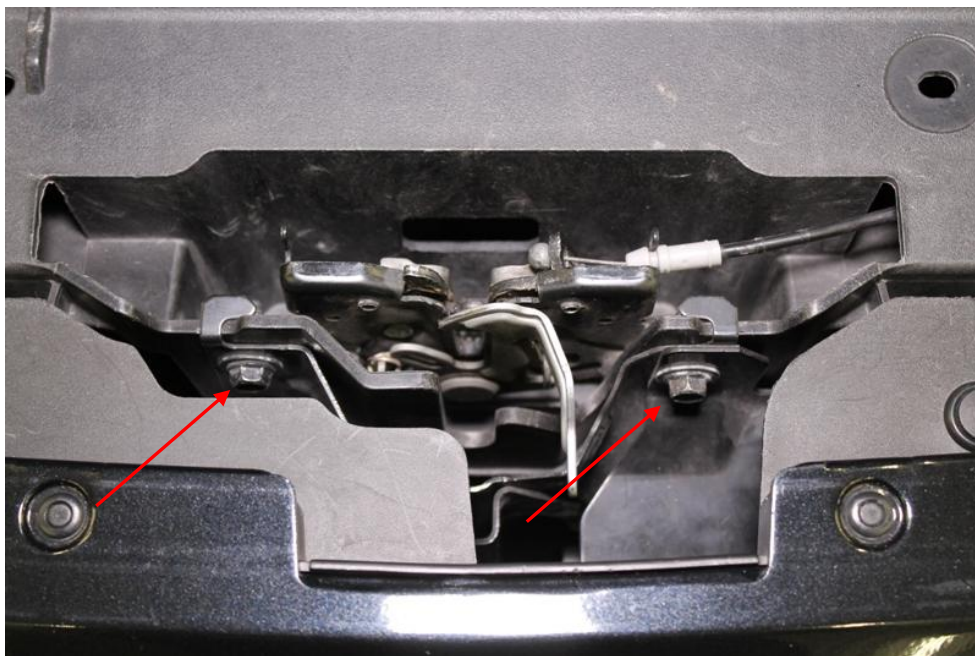

- Using a flat head screw driver remove the plastic push pins near each head light.

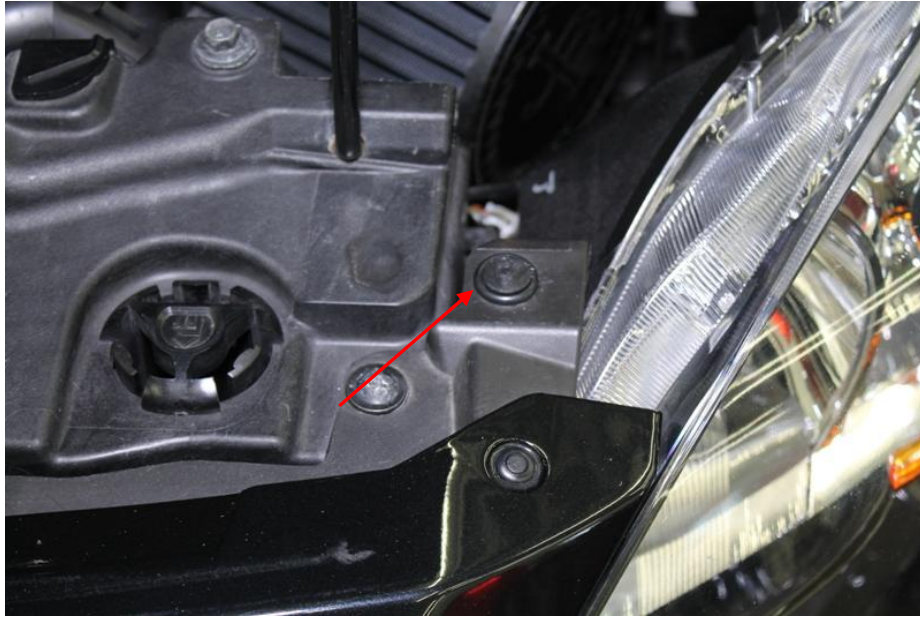

- Lay your new JBR Radiator Cover in place and secure with the push pins removed in the previous step.



- If need be, you can now adjust the hood levelers and the hood latch to achieve a nice even fit of the hood across the front.

Copyright © 2017 James Barone Racing LLC. Any unauthorized reproduction or publication of this document is strictly prohibited without the written consent of James Barone Racing.

**Congratulations!! This completes the installation of your new
JBR Radiator Cover!!**