

James Barone Racing
Custom Fabrication of Aftermarket Parts and Accessories


06'-07' MAZDASPEED 6
Chrome-Molly Rear Motor Mount Installation Instructions

1. Begin by parking on a smooth level surface with the emergency brake engaged. Jack up the front of the vehicle and position jack stands underneath both sides..



Refer to you vehicles owner's manual for proper jack placement and supporting procedures. Never get under a vehicle without the proper support in place.

2. Remove the engine belly pan
3. Support the center of the motor with a block of wood and a jack.
4. Remove the factory rear motor mount
5. Install your new JBR Molly Rear Motor Mount with the narrow bushing end towards the rear of the vehicle.

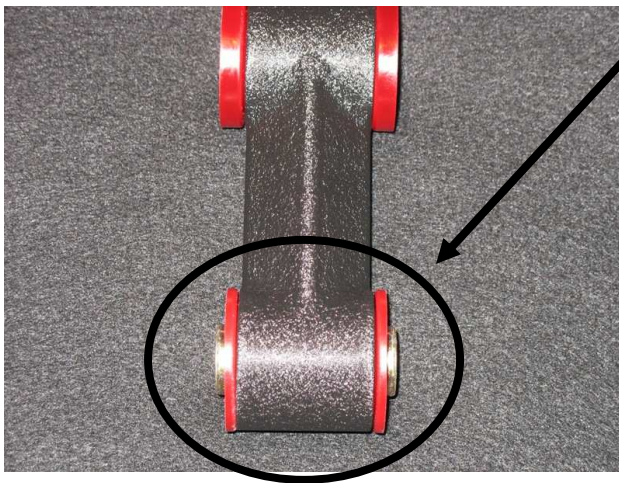

6. Torque the mounting bolts to 70 foot-pounds
7. Reinstall the engine belly pan

CONGRATULATIONS YOU'RE ALL DONE!!

*****Warning*****

After a few days of driving recheck and if necessary re-torque of all mounting bolts to ensure they have not come loose.

Failure to carefully follow the installation instructions for your JBR product could result in death, serious injury or damage to your car or your new parts. Please take the time to read and thoroughly understand the instructions prior to installation. The directions are as accurate as possible and may vary slightly from model year to model year.

**Thanks,
Jamie**

Legal Disclaimer

JAMES BARONE RACING is not responsible for the misuse, incorrect installation, or failure of any product we sell. Under no circumstances, including but not limited to negligence, will JAMES BARONE RACING be liable for special or consequential damages that result from the use or inability to use our products. JAMES BARONE RACING does not assume responsibility for any damage to the user, passenger or vehicle resulting from the operation of a JAMES BARONE RACING product.

PLEASE DRIVE RESPONSIBLY.