



2012 and Up Focus Rear Wiper Delete Installation Instructions (All Models)

Tooling:

- ✓ Ratchet wrench
- ✓ 7mm, 8mm, 10mm & 13mm sockets

Parts List:

- ✓ Wiper delete outer cap
- ✓ Wiper delete inner cap
- ✓ 6mm hex head bolt
- ✓ 6mm lock washer
- ✓ Rubber Washer
- ✓ O-ring

**Please be sure to read and understand the instructions thoroughly before beginning.

1. Remove the cover from both handles. These can be pulled off by hand.



2. Using a 7mm socket remove the two bolts under each handle cover.



3. Remove the main interior panel by pulling towards you.




4. Remove the wiper arm cover by spreading the ears of the cover and pulling it off.



5. Use a 13mm socket to remove the wiper arm retaining nut. Wiggler the arm to remove it .




6. Remove the electrical connector from the wiper motor. Then, use an 8mm socket to remove the three bolts. Remove the wiper motor from the vehicle.

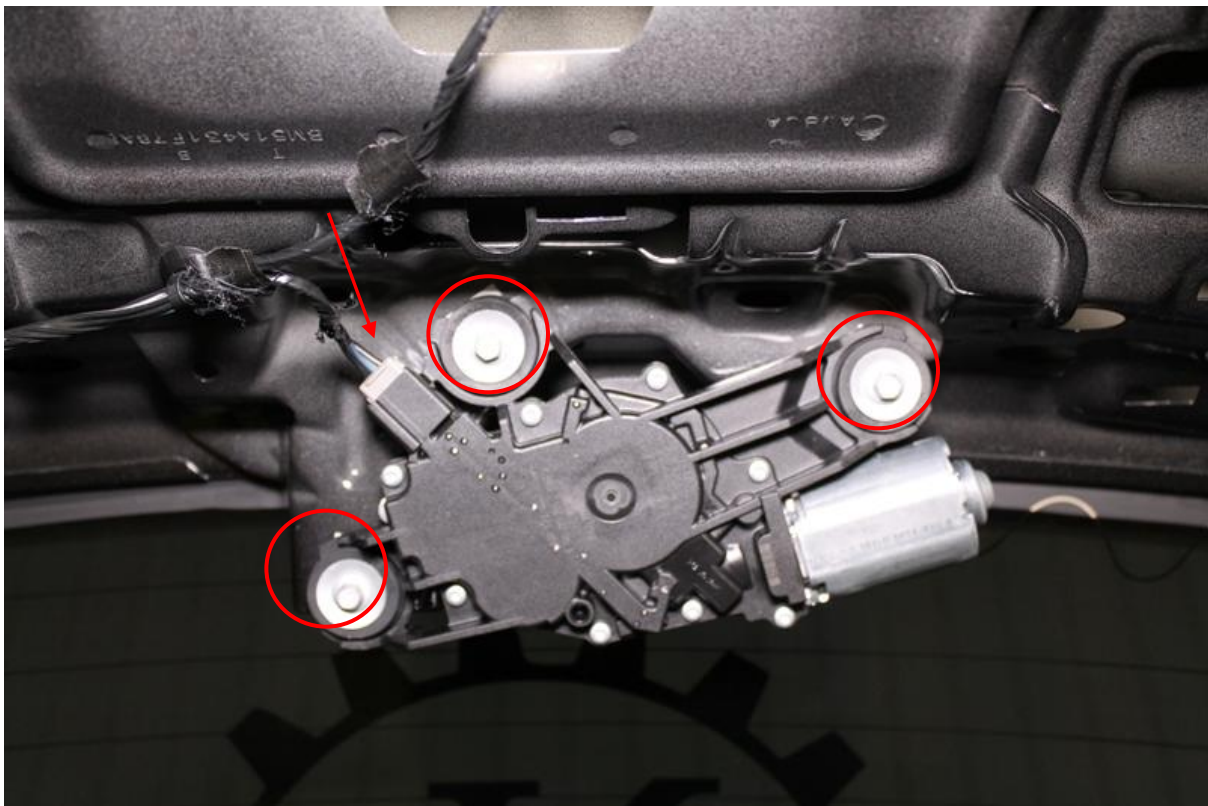

Copyright © 2017 James Barone Racing LLC. Any unauthorized reproduction or publication of this document is strictly prohibited without the written consent of James Barone Racing.

7. Remove the rubber seal from the window by pulling it out from the outside.

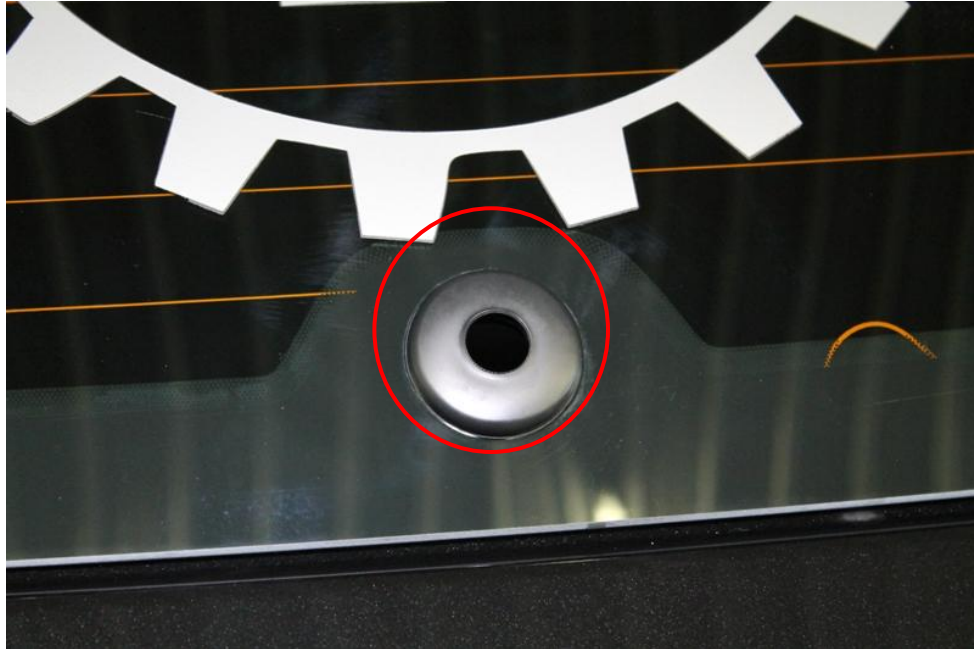

8. Put the lock washer on the 6mm bolt, slip it through the inner cap and put the rubber washer over the bolt. Put the outer cap in place and hold it with one hand. Close the hatch part way and look inside to center the outer cap with the hole in the glass. The o-ring should not be visible. Once the outer cap is centered and the logo is straight, thread the inner cap into the outer cap.



9. Tighten using a 10mm socket until the lock washer is flat. Once the lock washer is flat give it only half turn more and stop. Tightening it any more could cause the rear window to shatter.



10. Replace the interior trim.

**Congratulations!! This completes the installation of your new
JBR Rear Wiper Delete Kit!!**