



2013 & Up Ford Focus ST/RS Throttle Pedal Spacer Installation Instructions

Tooling:

- ✓ Ratchet wrench
- ✓ 10mm Socket
- ✓ Short extension




JAMESBARONERACING.COM

Parts List:

- ✓ One (1) JBR throttle pedal spacer
- ✓ Four (2) 6mm x 16mm bolts
- ✓ Four (2) 6mm flat washers
- ✓ Four (2) 6mm lock washers

1. Remove the 2, 10mm nuts securing the throttle pedal assembly to the firewall and move the assembly out of the way.

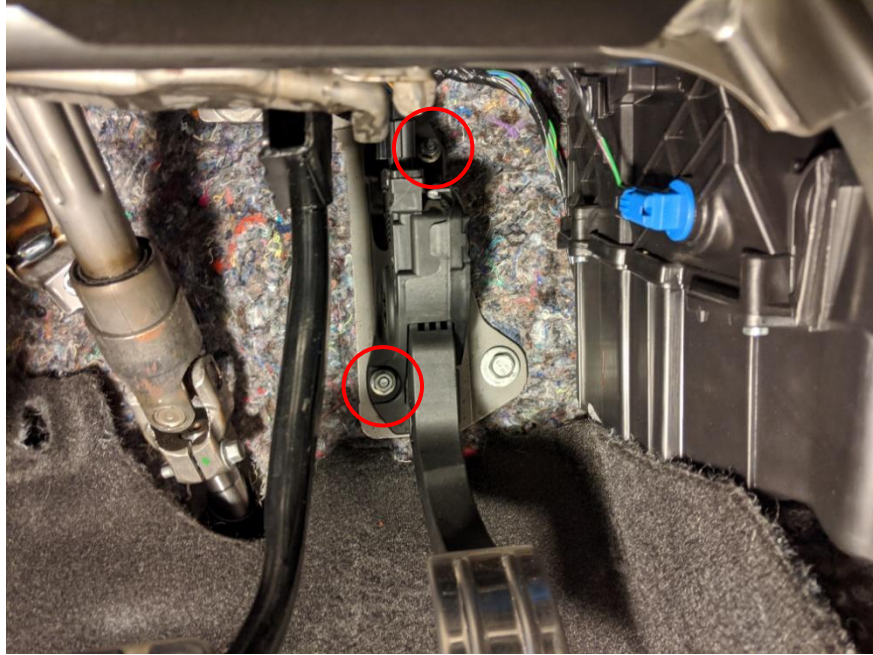

2. Using the nuts removed in the previous step; install your new JBR Throttle Pedal Spacer.



3. Using the 2, 6mm bolts, lock washers and flat washers provided, re-install the throttle pedal assembly on to the throttle pedal spacer.



Congratulations!!
You've now completed the installation of you New
JBR Throttle Pedal Spacer!