



**JAMES BARONE RACING
AFTERMARKET PARTS AND ACCESSORIES**

**2019+ Hyundai Veloster N
License Plate Re-Locate Kit Installation Instructions**



Tooling:


- ✓ Ratchet
- ✓ 19mm & 22mm sockets
- ✓ 2, 10mm wrenches
- ✓ Crescent wrench (Optional)
- ✓ Small level (Optional)

Parts List:

- ✓ 1, large hex bolt
- ✓ 1, license plate bracket
- ✓ 1, 12mm bolt
- ✓ 1, 12mm flat washer
- ✓ 1, 12 lock washer
- ✓ 4, 6mm nuts
- ✓ 8, 6mm flat washers
- ✓ 4, 6mm bolts

Copyright © 2021 James Barone Racing LLC. Any unauthorized reproduction or publication of this document is a violation of U.S. copy write Law. Violators will be prosecuted to the fullest extent of the law.

1. Press the upper area of the tow hook cover inward and then remove the cover by fishing the ears of the tether through the hole.

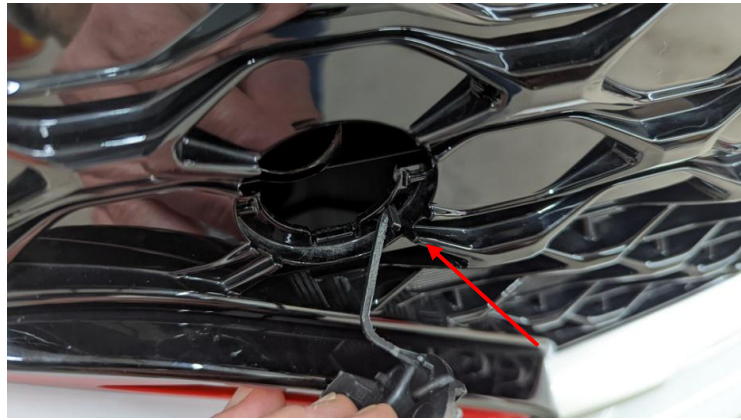

2. Install the large hex bolt and tighten to 50ft/lbs



Copyright © 2021 James Barone Racing LLC. Any unauthorized reproduction or publication of this document is a violation of U.S. copy write Law. Violators will be prosecuted to the fullest extent of the law.

- Using the 12mm hardware included with your kit, install the license plate bracket in the desired location and level the bracket. Tighten to 25ft/lbs.



- Using the 6mm hardware included with your kit install your license plate.



Congratulations!
You've now completed the installation of your new
JBR License Plate Relocate Kit!!

Copyright © 2021 James Barone Racing LLC. Any unauthorized reproduction or publication of this document is a violation of U.S. copy write Law. Violators will be prosecuted to the fullest extent of the law.